



## How to change WIFI setting on a Pyronix Alarm

To change the WiFi on a Pyronix security system, you'll need to access the system's menu, navigate to the WiFi setup, and then enter the new network's SSID (name) and password. The process involves entering your user code and then using the keypad to input the new network information, including making letters uppercase where necessary.

Here's a more detailed breakdown:

### 1. 1. Access the Menu:

On the main panel, press the "D" button, then enter your user code.

### 2. 2. Navigate to WiFi Setup:

Press the "NO" button repeatedly until you reach the "WIFI SETUP" option, then press "YES".

### 3. 3. Enter SSID:

The panel will display "Setup with Wi-Fi Device?". Press "NO", then "YES" to enter the SSID. Enter the SSID (network name) carefully, using the "A" button to make letters uppercase if needed.

### 4. 4. Enter Password:

Press "NO" to move past the SSID prompt, then "YES" to enter the password. Enter the WiFi password, also using the "A" button for uppercase letters.

### 5. 5. Signal Strength:

The panel will display the signal strength. Ensure it's at a sufficient level (e.g., 11 or higher).

### 6. 6. Save and Exit:

Navigate back to the "WIFI SETUP" screen and press the "A" button to save the changes and exit the menu.

For more help: <https://www.youtube.com/watch?v=CmKEcKctfhg>

If you are still struggling to get this to work, you may require an engineers visit.